

## Assembly

### Assembly of one PUA:

1° Put a plastic strap over the joint with a double round and tight slightly to the first “click”. (see [drawing 1](#)).

2° Insert PUA between tube and strape (see [drawing 2](#)) and tight (see [drawing 3](#)).

3° Put a plastic strap on PUA with double round to the tube and tight (see [drawing 4](#)).

4° Cut the straps overlength (see [drawing 5](#)).

#### ***Important:***

- The plastic straps should be 350mm length.

### Assembly of two PUA:

1° Put a plastic strap over the joint with a double round and tight slightly to the first “click “ (see [drawing 6](#)).

2° Insert both PUA between tube and strape (see [drawing 7](#)).and tight (see [drawing 7](#)).

3° Put a plastic strap on both PUA with double round to the tube and tight (see [drawing 8](#)).

4° Cut the straps overlength (ver [drawing 9](#)).

#### ***Important:***

The plastic straps should be 350 mm length.

### ASSEMBLY 1 PUA

DRAWING 1




DRAWING 2



DRAWING 3



DRAWING 4

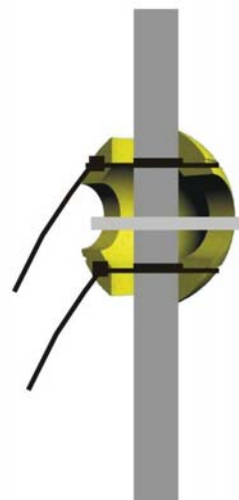

DRAWING 5



### ASSEMBLY 2 PUA

DRAWING 6



DRAWING 7



DRAWING 8



DRAWING 9

